NOTE:

This is for AMD K7 main board to set the jumper setting. Please make sure the CPU FSB before setting the jumper. It may cause PC unstable or can not reboot if you didn't set the correct jumper setting.

Model List (Please click your main board model directly)

K7-VIA Series

K7VT2

M810LMR

K7VM2

K7VM2 R3.0

K7VT4-4X

K7VT4A

<u>K7VM4</u>

<u>K7VM3</u>

K7VT4A+

K7VT6

K7V88

K7Upgrade-880

K7Upgrade-600

K7VT4A PRO

K7-SIS Series

K7S8X

K7S8X R3.0

K7S8XE

K7S8XE R3.0

K7S8XE+

746FX-M

K7S41

K7S41GX



K7VT2: Support FSB 200/266 (User Guide P.11)

Jumper Setting 100 (= FSB 200):FSB_SEL1 : 2_3



Jumper Setting 133 (= FSB 266):FSB_SEL1 : 1_2



M810LMR: Support FSB 200/266 (User Guide P.10)

Jumper Setting 100MHz (= FSB 200):FSB_SEL1 : 2_3





Please move the jumper cap to FSB_SEL1: 2_3

Jumper Setting 133MHz (= FSB 266):FSB_SEL1 : 1_2





Please move the jumper cap to FSB_SEL1: 1_2



K7VM2: Support FSB 200/266 (User Guide P.11)

Jumper Setting 100MHz (= FSB 200):FSB_SEL1: 2_3




Jumper Setting 133MHz (= FSB 266):FSB_SEL1 : 1_2




Please move the jumper cap to FSB_SEL1: 1_2

K7VM2 R3.0: Support FSB 200/266 (User Guide P.11)

Jumper Setting 200MHz:FSB_SEL1: 2_3

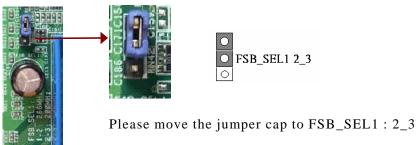

Jumper Setting 266MHz:FSB_SEL1:1_2

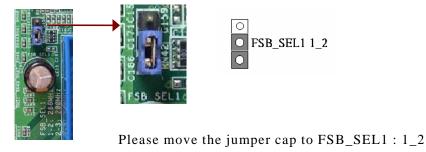



K7VT4-4X: Support FSB 200/266/333 (User Guide P.13)

 
Jumper Setting 200MHz:FSB_SEL1: 1_2



FSB_SEL0 1_2

Please move the jumper cap to FSB_SEL0: 1_2

Jumper Setting 266MHz:None



O O No Jumper Cap

Please move the jumper cap away

Jumper Setting 333:FSB_SEL1: 2_3



○ ○ ○ FSB_SEL0 2_3

Please move the jumper cap to FSB_SEL0: 2_3



K7VT4A: Support FSB 200/266/333 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL1: 1_2



○ ○ ○ FSB_SEL0 1_2

Please move the jumper cap to FSB_SEL0: 1_2

Jumper Setting 266MHz: None



OOO No Jumper Cap

Please move the jumper cap away

Jumper Setting 333:FSB_SEL1: 2_3



O O FSB_SEL0 2_3

Please move the jumper cap to FSB_SEL0: 2_3




K7VM4: Support FSB 200/266/333 (User Guide P.12)

Jumper Setting 200MHz:FSB_SEL1: 1_2



Jumper Setting 266MHz: None

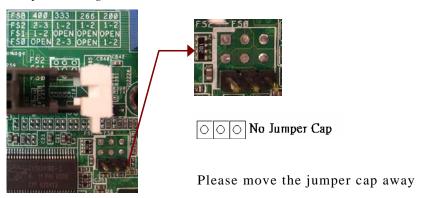

Jumper Setting 333MHz:FSB_SEL1: 2_3






K7VM3: Support FSB 200/266/333 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 1_2



Jumper Setting 266MHz: None

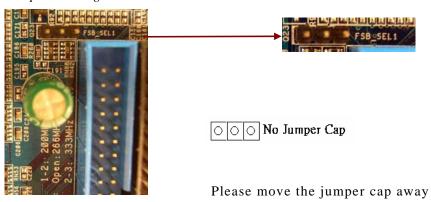

Jumper Setting 333MHz:FSB_SEL1: 2_3





<u>K7VT4A+</u>: Support FSB 200/266/333/400 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL2: 1_2



000	FSB_SEL0 1_2
000	FSB_SEL1 N/A
000	FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and

 $FSB_SEL2:1_2$

Jumper Setting 266MHz:FSB_SEL1: 2_3 FSB_SEL2: 1_2





Please move the jumper cap to FSB_SEL1:2_3 and

FSB_SEL2: 1_2

Jumper Setting 333:FSB_SEL0: 2_3 FSB_SEL2: 1_2





Please move the jumper cap to FSB_SEL0: 2_3 and FSB_SEL2: 1_2

Jumper Setting 400:FSB_SEL1:1_2 FSB_SEL2:2_3



OOO FSB_SELO N/A ○ ○ ○ FSB_SEL1 1_2 O O FSB_SEL2 2_3

Please move the jumper cap to FSB_SEL1: 1_2 and FSB SEL2:23



<u>K7VT6</u>: Support FSB 200/266/333/400 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL2: 1_2



0	0	0	FSB_SEL0 1_2
\circ	0	\circ	FSB_SEL1 N/A
0	0	0	FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and FSB_SEL2: 1_2

Jumper Setting 266MHz:FSB_SEL1: 2_3 FSB_SEL2: 1_2



FSB_SELO N/A ○ ○ ○ FSB_SEL1 2_3 ○ ○ ○ FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL1:2_3 and FSB_SEL2: 1_2

Jumper Setting 333:FSB_SEL0: 2_3 FSB_SEL2: 1_2



O O FSB_SEL0 2_3 OOO FSB_SEL1 N/A ○ ○ ○ FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and FSB_SEL2: 1_2

Jumper Setting 400:FSB_SEL1:1_2 FSB_SEL2:2_3



OO FSB_SELO N/A ○ ○ ○ FSB_SEL1 1_2 ○ ○ ► FSB_SEL2 2_3

Please move the jumper cap to FSB_SEL1: 1_2 and FSB_SEL2: 2_3



K7V88: Support FSB 200/266/333/400 (User Guide P.15)

Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL1: 2_3






Please move the jumper cap to FSB_SEL0: 1_2

FSB_SEL1 : 2_3

Jumper Setting 266MHz:FSB_SEL0: 1_2 $FSB_SEL1:1_2$

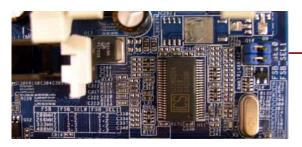



Please move the jumper cap to FSB_SEL0: 1_2

FSB_SEL1: 1_2


Jumper Setting 333MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2





Please move the jumper cap to FSB_SEL0: 2_3 FSB_SEL2: 2_3

FSB_SEL1: 2_3 Jumper Setting 400MHz:FSB_SEL0: 2_3

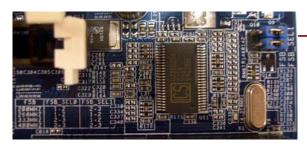






Please move the jumper cap to FSB_SEL0: 2_3

FSB_SEL1: 2_3



K7Upgrade-880: Support FSB 200/266/333/400 (User Guide P.16)

 Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL1: 2_3




FSB_SEL0 1_2 FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 1_2

FSB_SEL1: 2_3

Jumper Setting 266MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2

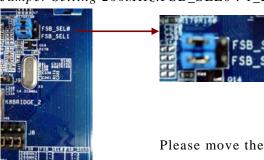



Please move the jumper cap to FSB_SEL0: 1_2

FSB_SEL1: 1_2

Jumper Setting 333MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2







Please move the jumper cap to FSB_SEL0: 2_3

FSB_SEL2 : 2_3

Jumper Setting 400MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3







Please move the jumper cap to FSB_SEL0: 2_3

FSB_SEL1 : 2_3



K7Upgrade-600: Support FSB 200/266/333/400 (User Guide P.15)

Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL2: 1_2




Please move the jumper cap to FSB_SEL0: 1_2 and FSB_SEL2: 1_2


Jumper Setting 266MHz:FSB_SEL1: 2_3 FSB_SEL2: 1_2



Jumper Setting 333:FSB_SEL0: 2_3 FSB_SEL2: 1_2

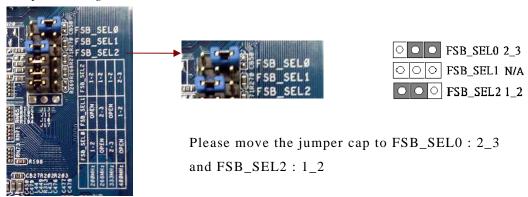


Jumper Setting 400:FSB_SEL1:1_2 FSB_SEL2:2_3

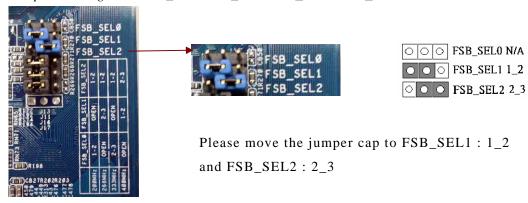



K7VT4A PRO: Support FSB 200/266/333/400 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 1_2 FSB_SEL2: 1_2

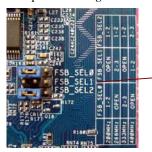



O O FSB_SEL0 1_2 ○ ○ FSB_SEL1 N/A ○ ○ ○ FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and FSB_SEL2: 1_2

Jumper Setting 266MHz:FSB_SEL1: 2_3 FSB_SEL2: 1_2








Please move the jumper cap to FSB_SEL1:2_3 and $FSB_SEL2:1_2$

Jumper Setting 333:FSB_SEL0: 2_3 FSB_SEL2: 1_2

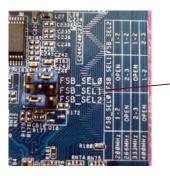



○ ○ ○ FSB_SEL0 2_3 OO FSB_SEL1 N/A FSB_SEL2 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and FSB_SEL2: 1_2

Jumper Setting 400:FSB_SEL1:1_2 FSB_SEL2:2_3







Please move the jumper cap to FSB_SEL1: 1_2 and FSB_SEL2: 2_3



K7S8X: Support FSB 200/266/333 (User Guide P.11)

Jumper Setting 100MHz (= FSB 200):FSB_SEL0 : 2_3 FSB_SEL1 : 1_2



○ ○ ○ FSB_SEL0 2_3 ○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 133MHz (= FSB 266):FSB_SEL0 : 2_3 FSB_SEL1 : 2_3



O O FSB_SEL0 2_3 ○ ○ ○ FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 2_3

Jumper Setting 166MHz (= FSB 333):FSB_SEL0 : 1_2 FSB_SEL1 : 1_2



○ ○ ○ FSB_SEL0 1_2 OOO FSB SEL1 1 2

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 1_2

K7S8X R3.0: Support FSB 200/266/333 (User Guide P.11)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2



○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3



O O FSB_SEL0 2_3 O O FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 2_3

Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2



○ ○ FSB_SEL0 1_2 ○○○ FSB_SEL1 1_2

Please move the jumper cap to FSB SEL0: 1 2 and the other to FSB_SEL1: 1_2



K7S8XE: Support FSB 200/266/333/400 (User Guide P.12)

Jumper Setting 100MHz (= FSB 200):FSB_SEL0 : 2_3 FSB_SEL1 : 1_2



○ ○ ○ FSB_SEL0 2_3 ○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 133MHz (= FSB 266):FSB_SEL0 : 2_3 FSB_SEL1 : 2_3



○ ○ ○ FSB_SEL0 2_3 ○ ○ FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 2_3

Jumper Setting 166MHz (= FSB 333):FSB_SEL0 : 1_2 FSB_SEL1 : 1_2



○ ○ ○ FSB_SEL0 1_2 ○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 1_2

Jumper Setting 200MHz (= FSB 400):FSB_SEL0 : 1_2 FSB_SEL1 : 2_3



FSB_SEL0 1_2 O O FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 2_3



K7S8XE R3.0: Support FSB 200/266/333/400 (User Guide P.12)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2



FSB_SEL0 2_3 OOO FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3



O O FSB_SEL0 2_3 ○ ○ FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 2_3

Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2



○ ○ ○ FSB_SEL0 1_2 ○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 1_2

Jumper Setting 400MHz:FSB_SEL0:1_2 FSB_SEL1:2_3



FSB_SEL0 1_2 O O FSB_SEL1 2_3

Please move the jumper cap to FSB SEL0: 1 2 and the other to FSB_SEL1: 2_3



K7S8XE+: Support FSB 200/266/333/400 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2



O O FSB_SEL0 2_3 O O FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3



O O FSB_SEL0 2_3 ○ ○ ○ FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2



○ ○ ○ FSB_SEL0 1_2 FSB_SEL1 1_2

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 1_2

Jumper Setting 400MHz:FSB_SEL0: 1_2 FSB_SEL1: 2_3



 
FSB_SEL0 1_2 O O FSB_SEL1 2_3

Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 2_3




746FX-M: Support FSB 200/266/333 (User Guide P.13)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2




Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3

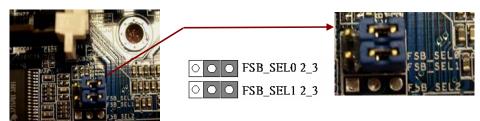

Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 2_3

 Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2



Please move the jumper cap to FSB_SEL0: 1_2 and the other to $FSB_SEL1:1_2$



K7S41: Support FSB 200/266/333/400 (User Guide P.14)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2 FSB_SEL2: 2_3





 


Please move the jumper cap to FSB_SEL0: 2_3 and the others to FSB_SEL1: 1_2 FSB_SEL2: 1_2

Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3 FSB_SEL2: 2_3








Please move the jumper cap to FSB_SEL0: 2_3 and the others to FSB_SEL1 : 1_2 FSB_SEL2 : 2_3

 Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2 FSB_SLE2: 2_3







Please move the jumper cap to FSB_SEL0: 1_2 and the others to FSB_SEL1: 1_2 FSB_SEL2: 2_3

Jumper Setting 400MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2 FSB_SEL2: 1_2





 


Please move the jumper cap to FSB_SEL0: 1_2 and the others to FSB_SEL1: 1_2 FSB_SEL2: 1_2




K7S41GX: Support FSB 200/266/333 (User Guide P.14)

Jumper Setting 200MHz:FSB_SEL0: 2_3 FSB_SEL1: 1_2



Please move the jumper cap to FSB_SEL0: 2_3 and the other to FSB_SEL1: 1_2

 
Jumper Setting 266MHz:FSB_SEL0: 2_3 FSB_SEL1: 2_3



Please move the jumper cap to FSB_SEL0: 2_3

and the other to FSB_SEL1: 2_3

 Jumper Setting 333MHz:FSB_SEL0: 1_2 FSB_SEL1: 1_2



Please move the jumper cap to FSB_SEL0: 1_2 and the other to FSB_SEL1: 1_2