

Technical Reference - Q&A

- 1. Q: When I install ATI HD6670, HD6570, and HD6450 on A75/A55 series motherboards, there is no display output from VGA card. What can I do?**

A:

Please update latest BIOS form our website.

Download link: <http://www.asrock.com/support/download.asp>

Or, enter BIOS > North Bridge Configuration, and set [Dual Graphics] to [Disabled].

- 2. Q: I would like to use WD SmartWare software for system backup, but when ASRock Xfast USB is enabled, WD Smartware does not work. What can I do?**

A:

Please uninstall original Asrock XFast from your system, and update latest XFast from below link:

<http://www.asrock.com/feature/XFastUSB/index.asp>

- 3. Q: I would like to test the VT-d feature. Do you have an SOP for it?**

A:

Please download SOP of VT-d test from the link below for reference,

<http://www.asrock.com/support/note/vt-d.pdf>

※ System requirements are listed below,

- i. 2048MB or larger of RAM (Minimum system requirements of VMWare)
- ii. K-series CPU does not support VT-d

- 4. Q: How could I enabled “Data Execution Protection (DEP)” supported from CPU?**

A:

Please enter BIOS, and set [No execute Memory Protection] to [Enabled].

You could find the option by BIOS-> Advanced-> CPU Configuration-> Set [No execute Memory Protection] to [Enabled.]