 



How to update Etron beta driver?

A).If the system already has previous Etron driver installed, please follow below SOP to update Etron beta driver.

1. Execute [Uninstall a program] under OS Control Panel.
2. Select [Uninstall] on [Etron USB3.0 Host Controller] program.

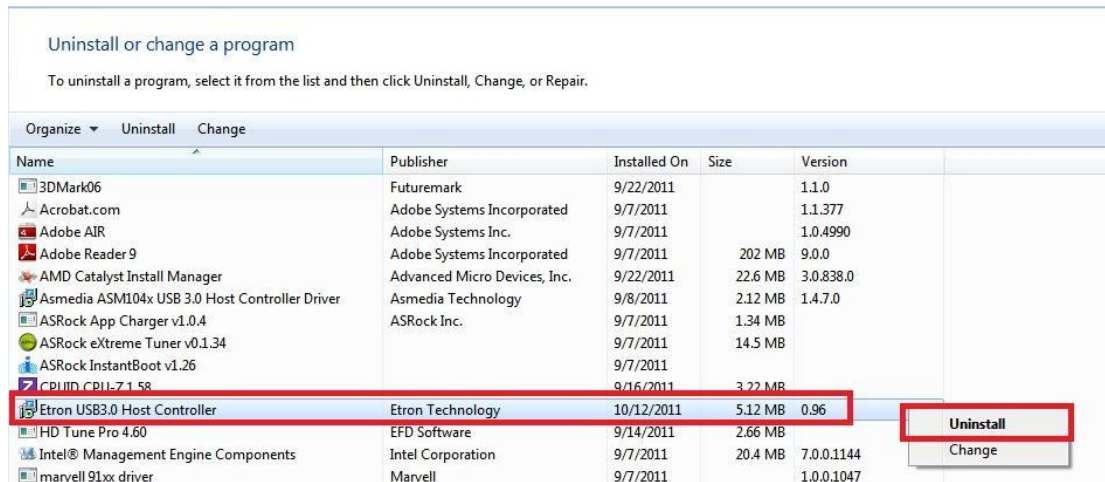


 3. After uninstall complete it will shows below message.

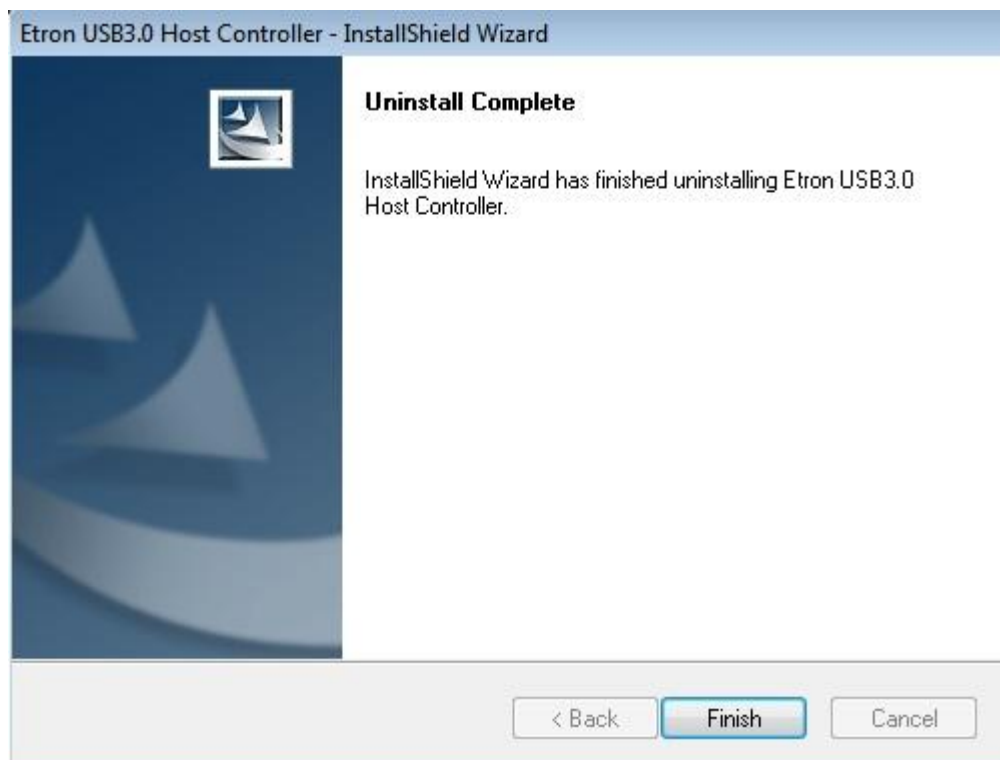


4. Restart system once.
5. Download and unzip the Etron beta driver form Asrock website.
6. Double click Etron USB driver.

 7. During install Etron USB beta driver, it will shows a message “Would you like to install this device software?” please select [Install].

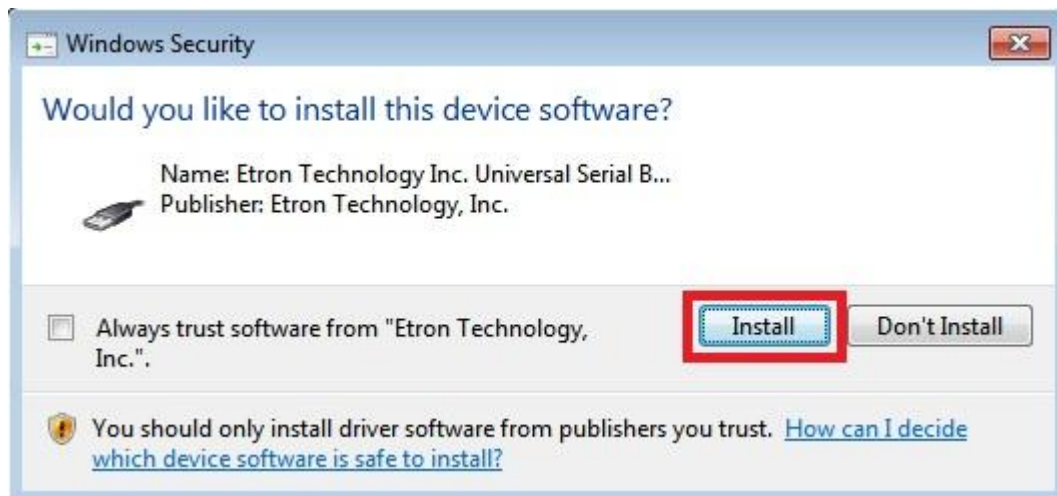

 8. After install complete, you may check the device manager.
[Etron USB3.0 Extensible Host Controller Properties] will shows [Driver Version: 0.5.394.1]

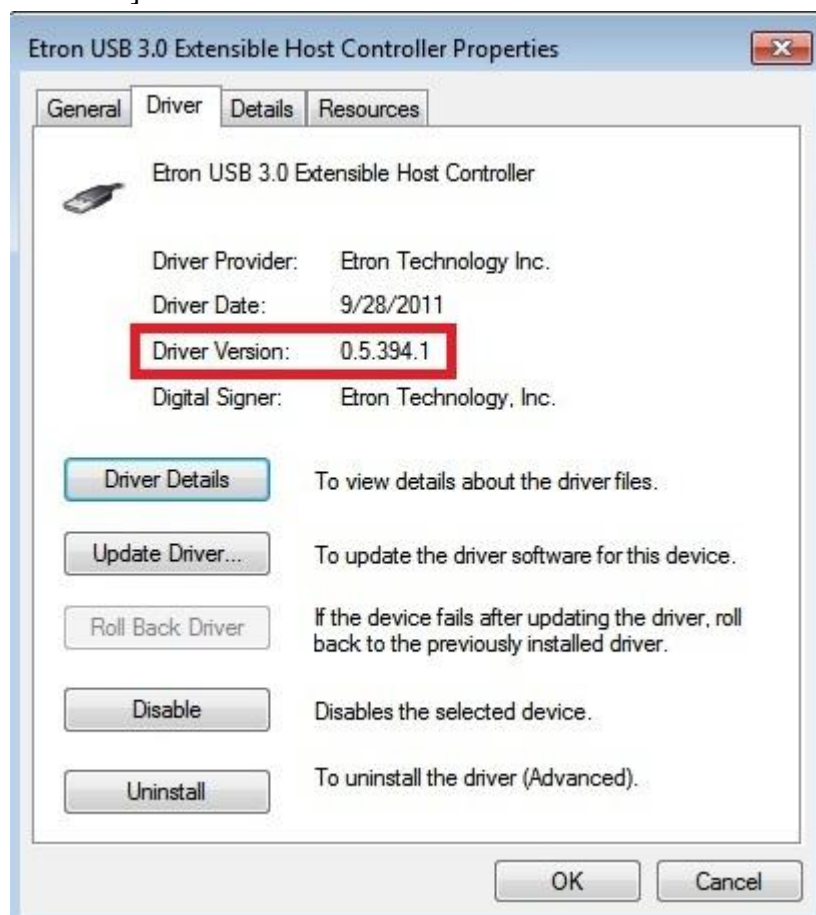

B).If the system without Etron USB3 before, please follow below SOP to install driver.

1. Download and unzip the Etron beta driver form Asrock website.
2. Double click Etron USB driver.
3. During install Etron USB beta driver, it will show a massage “Would you like to install this device software?” please select [Install].



4. After install complete, you may check the device manager.
[Etron USB3.0 Extensible Host Controller Properties] will shows [Driver Version: 0.5.394.1]

