

## Technical Reference - Q&A


### 1. Q: How to install IR driver under Ubuntu 10.04 with ION330HT series?

A:


※Since there may be several downloads or updates during the installation, please connect your system to the Internet before you start the installation.

1. Click on System on the tool bar > Administration > Synaptic Package Manager

2. Click Reload. After reloading, click Search and search for [dkms]

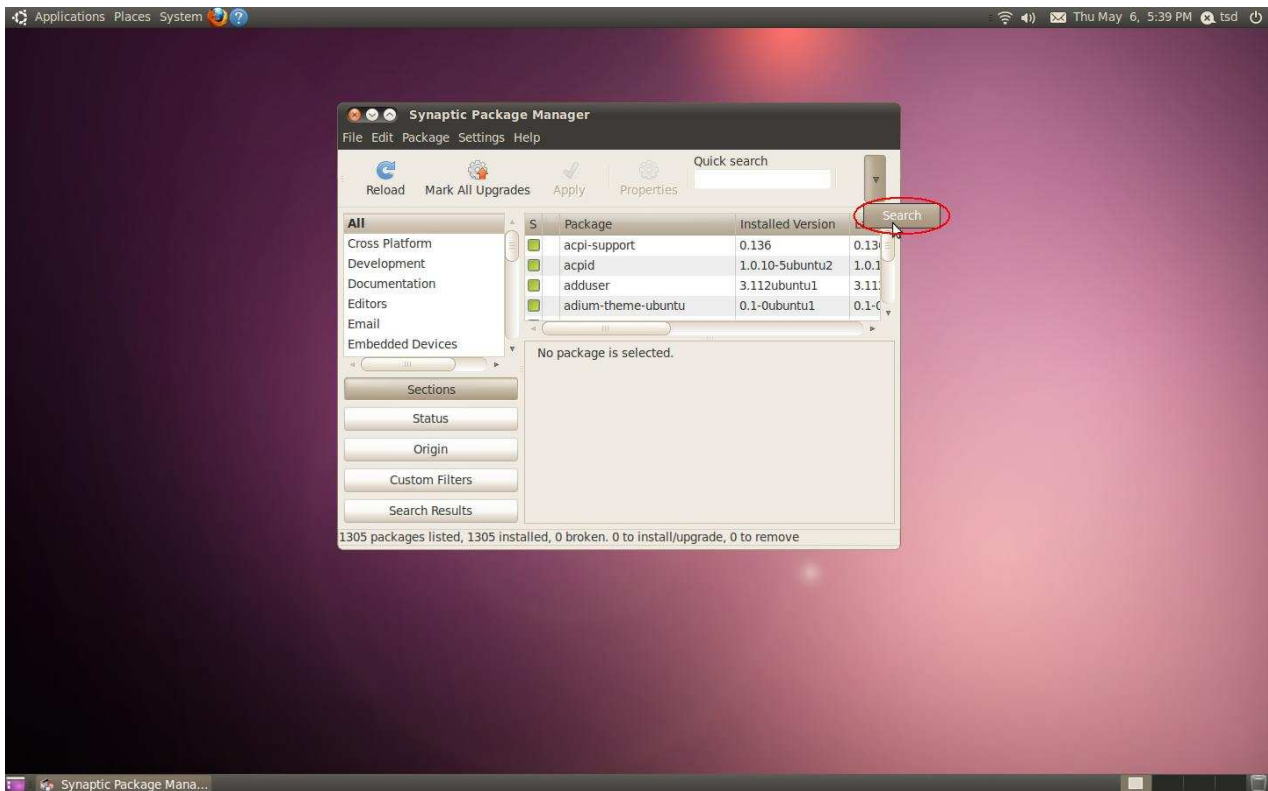

3. Click on [dkms], mark [dkms] for installation, then click [Apply].

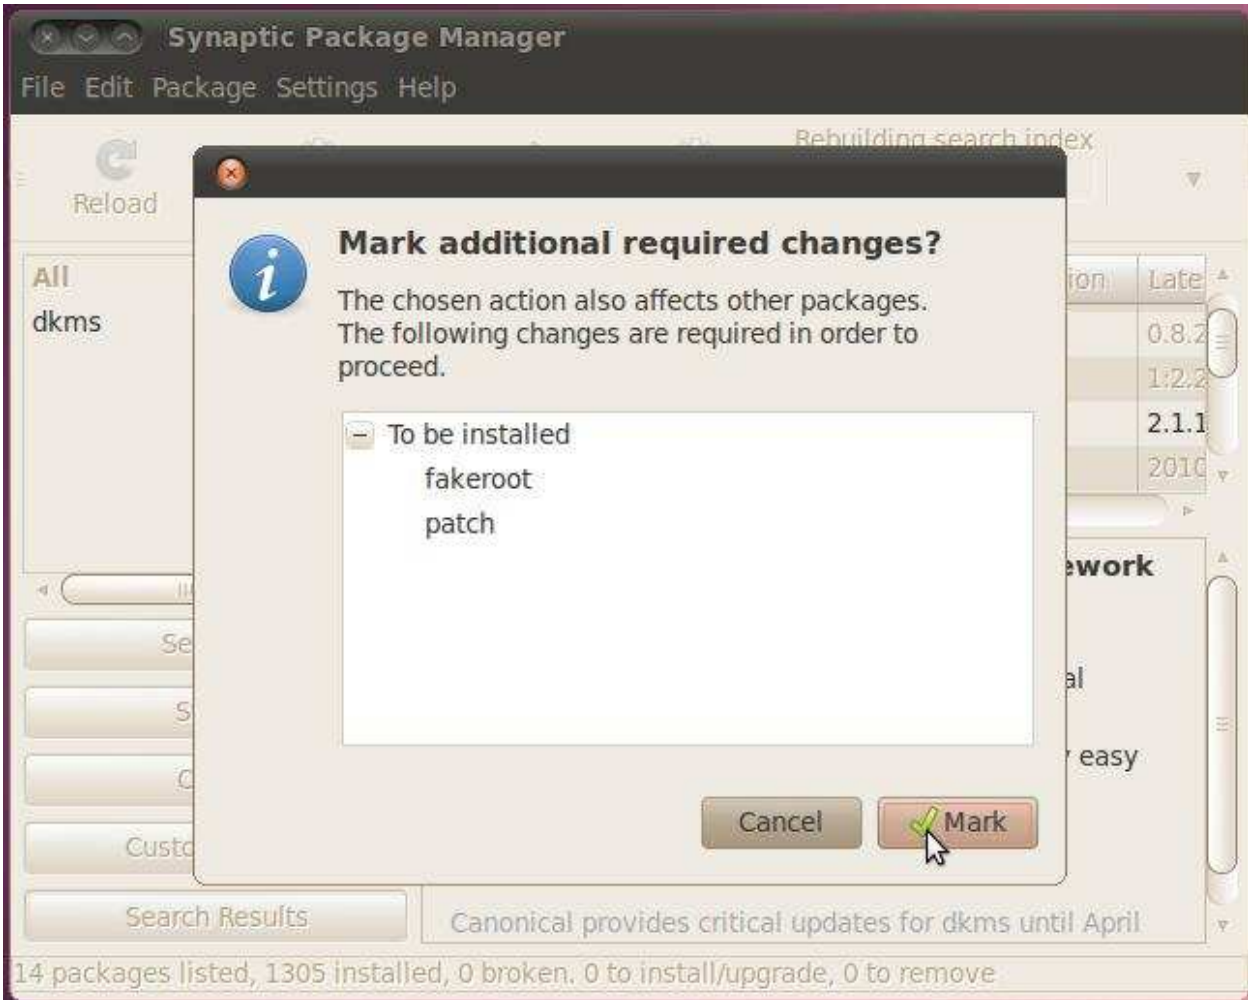


4. Choose [lirc-nct677x-1.0.4-ubuntu10.04 .deb]<sup>1</sup> file, and double click the left key of mouse.


5. Click [Install Package]




6. When the window as below picture shows, choose [None] for [remote control configuration], [None] for [IR transmitter, if present] ;and click [Forward].

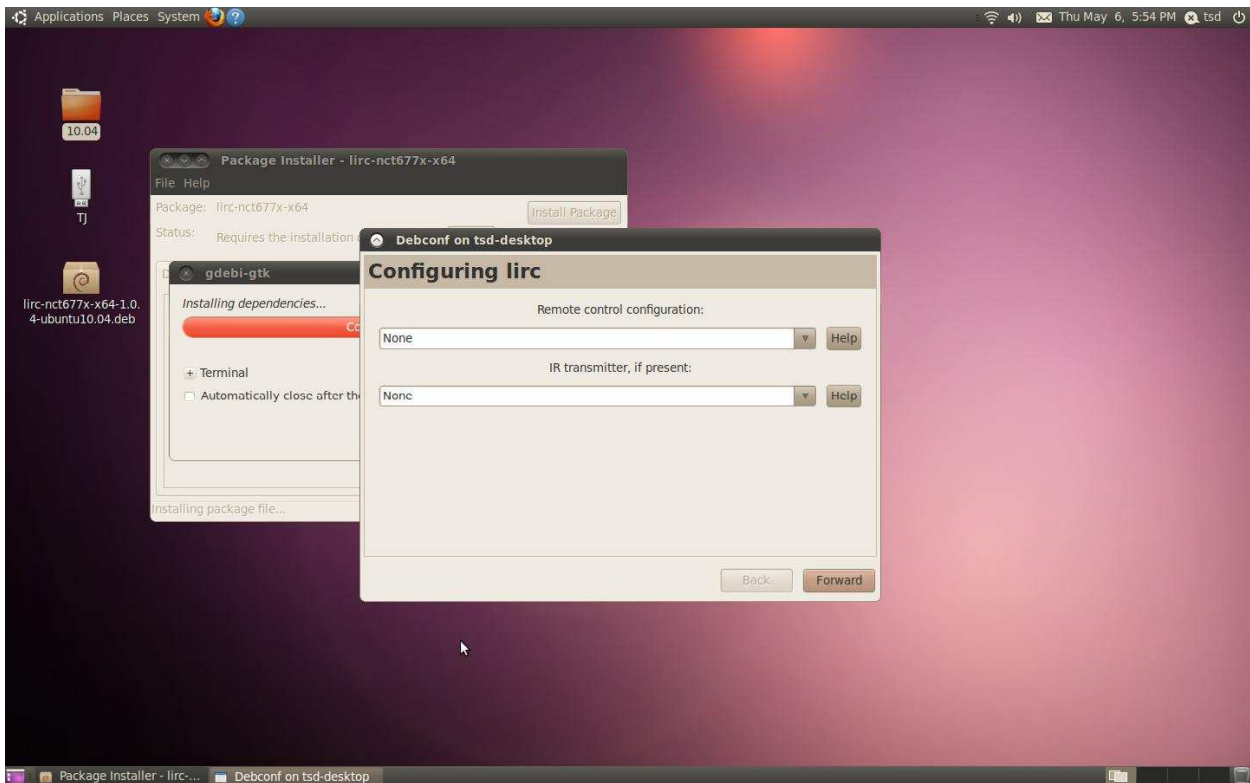

7. During install IR driver, [Configuring Lirc] page will show again. Please choose [Nuvoton Transceivers/Remotes] for [remote control configuration], [None] for [IR transmitter, if present] and click [Forward]

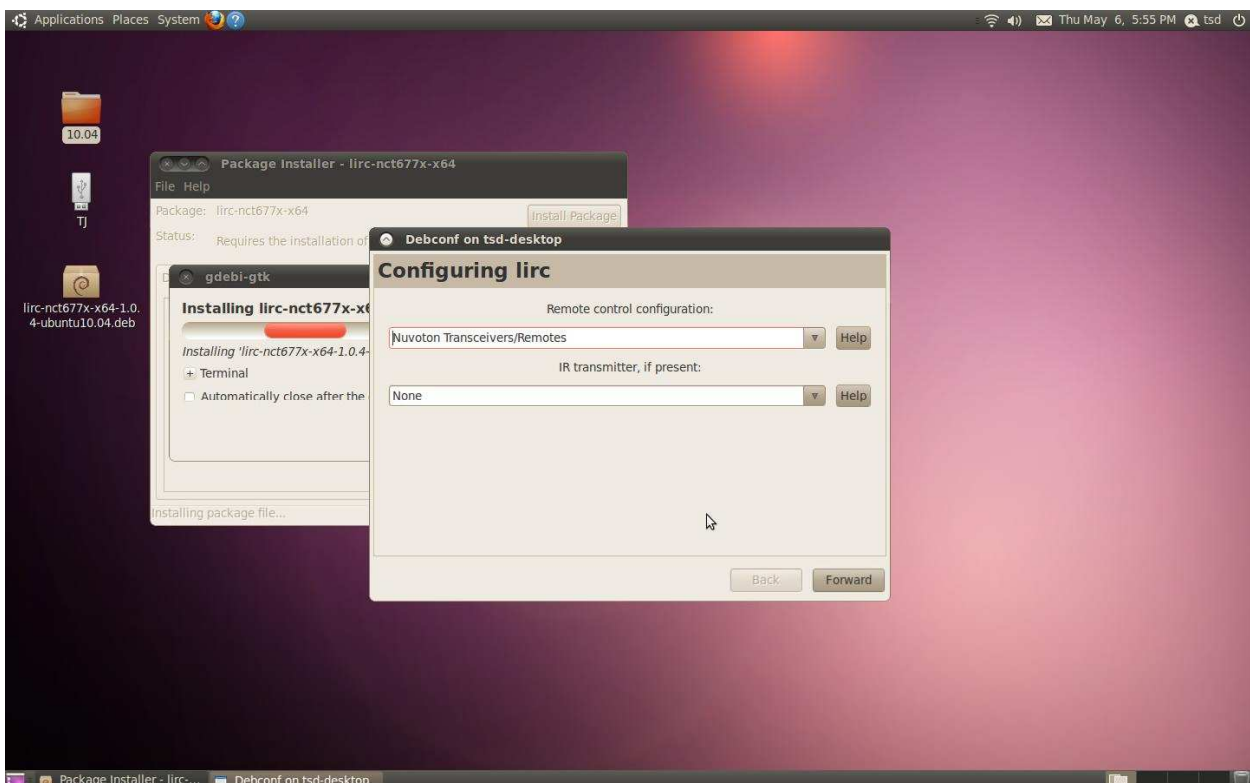


8. If you haven't installed Nvidia VGA driver, please activate Nvidia driver from System > Administration > Hardware Drivers.

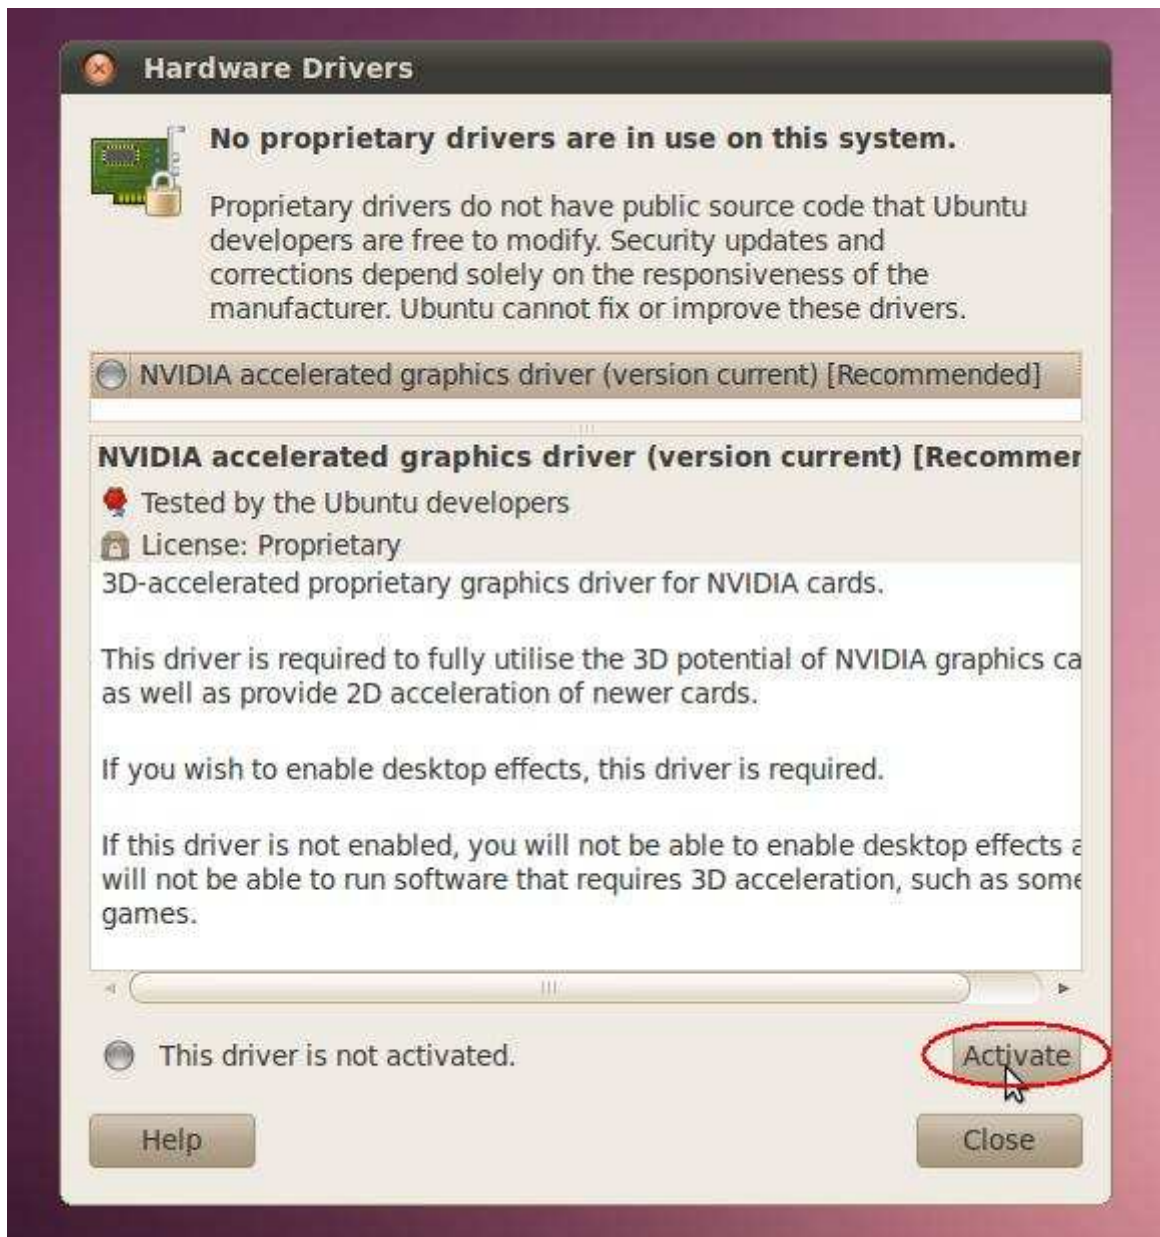


The driver version we used for test was 195.36.15.

You may check the driver version you used from System > Preferences > Monitor, when the message like picture below shows, click [Yes]

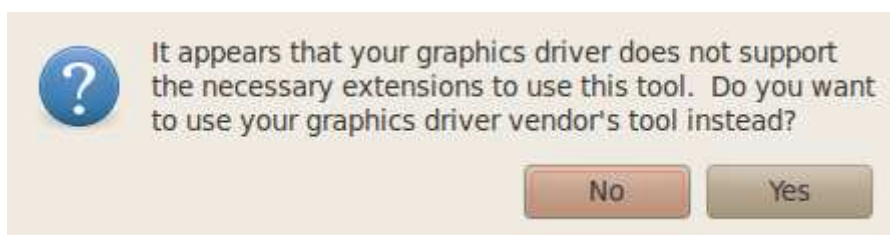

Then you can see the system information in the utility of Nvidia, as shown below,

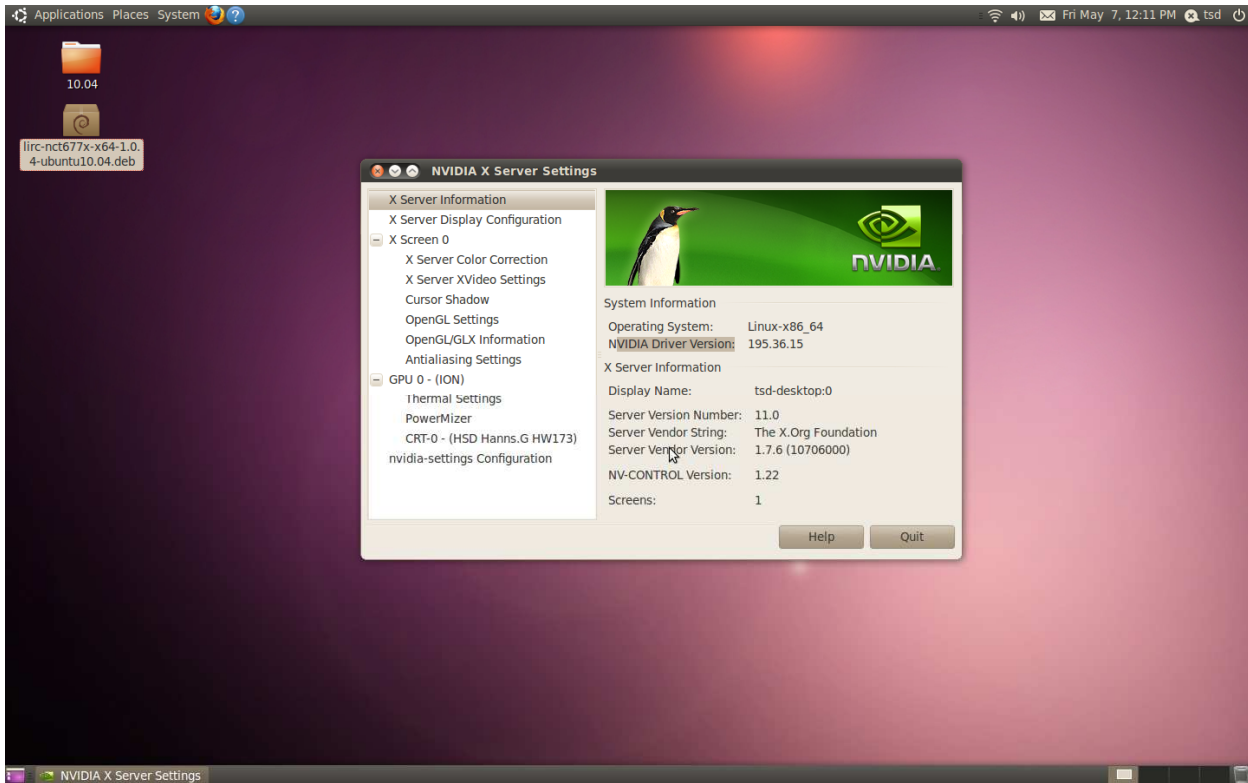

9. To install XBMC in Ubuntu 10.04, please refer to the links listed below,  
How-To install XBMC for Linux on Ubuntu, a Step-by-Step Guide,  
[http://wiki.xbmc.org/index.php?title=HOW-TO\\_install\\_XBMC\\_for\\_Linux\\_on\\_Ubuntu,\\_a\\_Step-by-Step\\_Guide](http://wiki.xbmc.org/index.php?title=HOW-TO_install_XBMC_for_Linux_on_Ubuntu,_a_Step-by-Step_Guide)

And a feedback from a user on Ubuntu Forum,  
<http://ubuntuforums.org/showthread.php?t=1470254>

According to the information, user may have to change the first command from  
“*sudo add-apt-repository ppa:team-xbmc*” to  
“*sudo add-apt-repository ppa:team-xbmc-svn/ppa*”

10. After XBMC installation, you can use Remote Controller with XBMC.

※ **Note 1. We test it under ubuntu10.04, kernel 2.6.32-21.**  
**The version may be updated once a while, please check our website for latest.**

※ **And if you update kernel, please follow below steps to set.**  
**A. Download “CIR receiver driver for Ubuntu 10.04 32/64bit new kernel ver:1.0.4” from**

our website.

**Download link:**

<http://www.asrock.com/nettop/download.asp?Model=ION%20330HT-BD&o=Linux>

**B. Choose “lirc-nct677x-1.0.4-ubuntu10.04\_kernel2.6.32-23.deb”, and install it, like above step4 ~step7.**

**C. Restart your system, and you can use Remote controller under XBMC.**