

## ***Technical Reference - Q&A***

### **1. Q: My PC runs Windows 98/ME, can I still use USB 2.0 products?**

**A:** Since Microsoft is only developing drivers for Windows XP and 2000, you will have to use a 3rd party vendor's drivers. Also Power Management for USB 2.0 works fine under Windows XP. It may not work properly under Win98/ME/2000. Please check detailed information from Microsoft Web Site:

<http://www.microsoft.com/HWDEV/BUS/usb/USB2support.asp>

<http://support.microsoft.com/default.aspx?scid=KB;EN-US;Q330892&>

### **2.Q: How do I install the LAN driver for K7VT2?**

**A:** Please install the LAN driver manually under Windows 98/ME/2000/XP with the following steps:

1. Put the K7VT2 support CD into the CD-ROM drive.
2. Double click on the "My Computer" icon, then right click on the CD-ROM drive and browse the support CD.
3. Locate the "winsetup.exe" on \Drivers\LAN folder and double click on "winsetup.exe" to run LAN installation program.
4. After 20 seconds, "The installation is completed!" will appear then you have finished the LAN installation.
5. Please restart your computer.

### **3. Q: How do I install USB 2.0 driver under Windows XP for K7VT2?**

**A:** Please install the USB 2.0 driver by running the support CD.

Click the icon of "VIA USB 2.0 Driver" in the support CD main menu.

### **4.Q: If I want to use 4/6 speakers, how do I setup 4/6-Channel audio ?**

**A:** STEP 1:

#### **4 CH:**

Connect the front L/R channel to "Line Out", the rear L/R channel to "Line In"

#### **6 CH:**

Connect the front L/R channel to "Line Out", the rear L/R channel to "Line In", and the Center/Subwoofer channel to "Mic In".




Front L/R Channel      Rear L/R Channel      Center/Subwoofer Channel

**STEP 2:**

After installation of C-Media Audio driver, you will find an icon "C-Media Audio configuration" on the taskbar.

**STEP 3:**

Click the icon, and the screen will show the current audio configuration. Select "Output" to change your audio configuration. Select "Analog" for Output Type and choose "4 channels"/"6 channels" for your speaker configuration. Then press "Apply" and press "Ok".

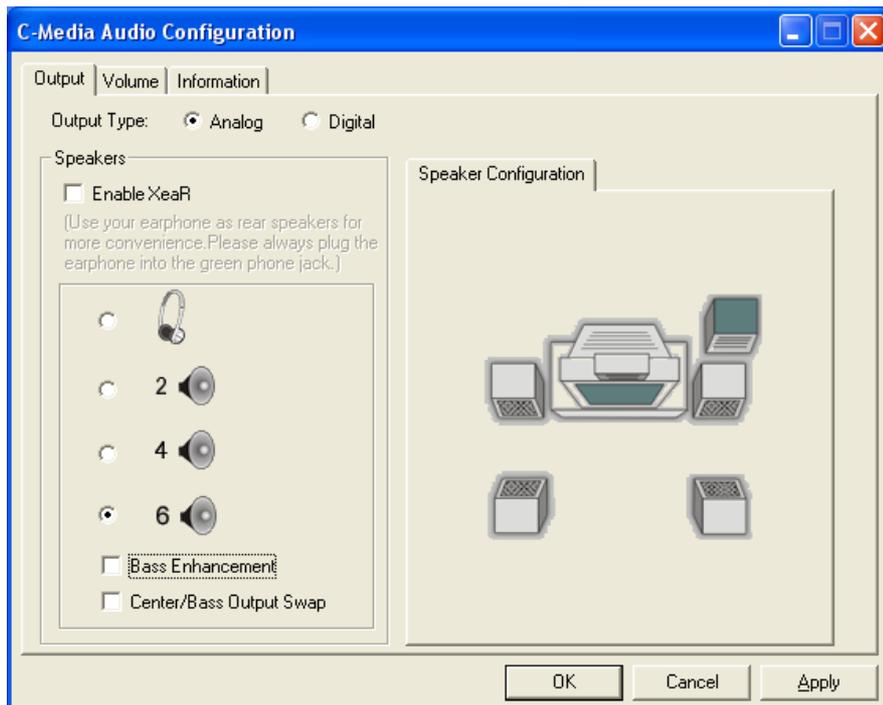

**5. Q:I have a TV card installed in K7VT2 and K7VM2. What should I adjust the setting to watch TV properly?**

**A:** Please do the following adjustment in Windows OS:

1. Right click on the desktop, click "Settings" in the Display Properties Windows.
2. Click "Advanced" then click "Troubleshoot".
3. Adjust "Hardware Acceleration" to "Disable all DirectDraw & Direct 3D accelerations, as well as." (the second selection from "None").
4. Click "Apply" then click "ok".
5. Reopen your TV card application.