

Technical Reference - Q&A

1. Q: What is ASRock U-COP?

A: ASRock **U-COP** = ASRock **U**niversal **C**PU **O**verheating **P**rotection is a hardware level mechanism, which provide the auto-power-shut-off function to protect CPU from the damage while the CPU temperature getting high.

All ASRock Intel/AMD CPU series motherboards are equipped with ASRock U-COP.

2. Q: After I updated BIOS, ASRock LOGO disappeared when booting up. Why?

A: Please don't worried! ASRock has removed LOGO in the new BIOS for all ASRock model. It is normal that ASRock LOGO disappeared after flashing BIOS.

3. Q: Why I only see 1667MHz for my Athlon XP 2000+ CPU?

A: 2000+ is the model number of AMD CPU, it does not represent the CPU frequency.

Please refer to <http://www.amd.com> for more information.

4.Q: Does the integrate VGA of G Pro support DirectX 9.0 under Win XP?

A: Please upgrade to SiS VGA driver V2.14 to supports DirectX 9.0. Please refer the structure of SiS web site.

http://download.sis.com/sisdllc/driver_list.jsp

5.Q: Where can I get the detailed BIOS setting description?

A: You can find the detailed user manual and BIOS setting description in ASRock support CD.

6. Q: Do I need to install USB2.0 driver if my system runs Win XP SP1?

A: You don't need to install USB2.0 if you already upgrade to service pack 1 which include USB2.0 driver.