

1. 问：我使用**775VM800/P4VM800/K7S41GX/K7S41**主板。这些主板支持**1440x900**分辨率吗？

答：如果您的主板是**775VM800**，请更新BIOS至P1.50或更高版本。

<http://www.asrock.com/support/download.asp?Model=775VM800>

如果您的主板是**P4VM800**，请更新BIOS至P1.60或更高版本。

<http://www.asrock.com/support/download.asp?Model=P4VM800>

如果您的主板是**K7S41GX**，请更新BIOS至P2.50或更高版本，并更新显卡驱动程序至3.73或更高版本。

<http://www.asrock.com/support/download.asp?Model=K7S41GX>

<http://www.sis.com/download/agreement.php?id=155931>

如果您的主板是**K7S41**，请更新BIOS至P2.30或更高版本，并更新显卡驱动程序至3.73或更高版本。

<http://www.asrock.com/support/download.asp?Model=K7S41>


<http://www.sis.com/download/agreement.php?id=155931>

2. 问：我使用一个**SATA**硬盘，而且我的电脑运行良好。但是，某一天我开机时，启动到**Windows Logo**画面之后电脑便自动重启。请问导致这一现象的可能原因是什么？

答：这可能是因为您的系统在IDE（或non-RAID）模式上安装。但是现在您却将它设置为RAID（AHCI）模式。请进入BIOS>Advanced>IDE Configuration尝试将它恢复到IDE（non-RAID）模式。

下面有几个例子供您参考，请查阅用户手册了解详情。


- VIA 和 Nvidia 芯片组：

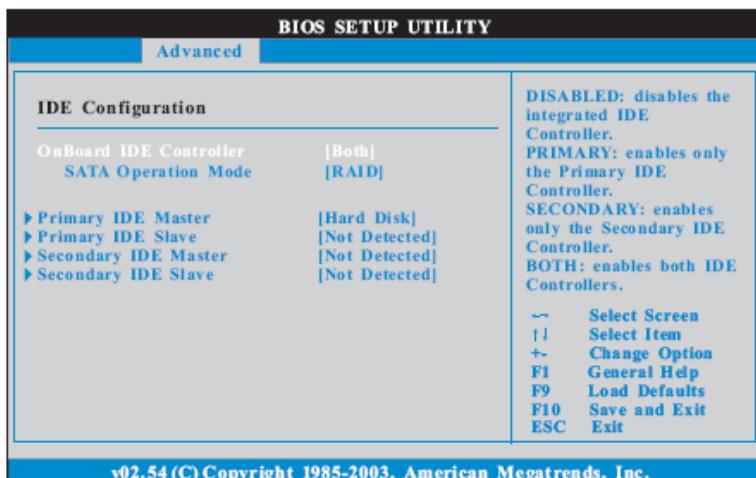

请将SATA Operation Mode设置为[non-RAID]


- Intel 芯片组：

### 3.3.4 IDE Configuration

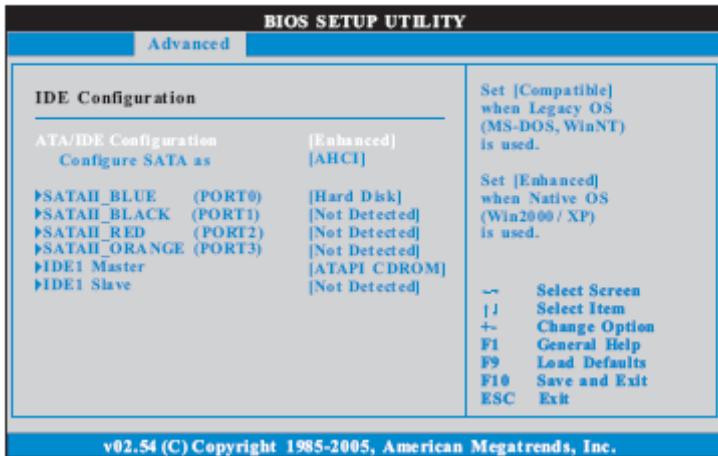

请将 Configure SATA as 设置为[IDE]

- 775Twins-HDTV (R2.0)或 P4Twins-HDTV

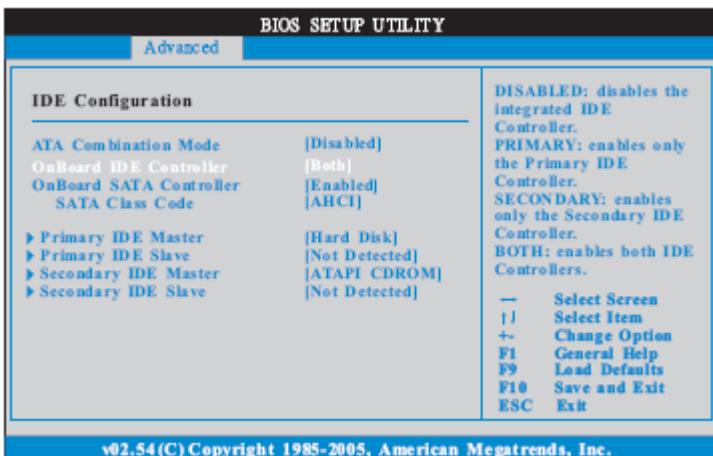

请将 ATA Combination Mode 设置为[Enable]

3. 问：我的主板是 ConroeXFire-eSATA2。当我从支持光盘启动制作 SATA 映像驱动程序软盘时。我应该做什么？

答： 1. 当您看到下面的提示信息时，请键入“Ctrl+C”，接着按“y”键终止程序。

GNU General Public License as published by the Free Software  
either version 2, or (at your option) any later version.  
C: HD1, Pri[ 1], CHS= 0-1-1, start= 0 MB, size= 15

FreeCom version 0.82 pl 2 XMS\_Swap [Apr 28 2003 17:47:52]

.

ConRoeXFIRE-eSATA2. is not a serial ATA support Mother board  
Please remove Support CD or choice another boot device to Boot  
Thanks

Reboot system now

Press any key to continue . . .

Control-Break pressed.

Terminate batch file 'C:\FREEDOS\FDAUTO.BAT' (Yes/No/All) ? \_

2.然后键入“satafd”。按“enter”回车键。

WARRANTY; you can redistribute it and/or modify it under  
GNU General Public License as published by the Free Software  
either version 2, or (at your option) any later version.  
C: HD1, Pri[ 1], CHS= 0-1-1, start= 0 MB, size=

FreeCom version 0.82 pl 2 XMS\_Swap [Apr 28 2003 17:47:52]

.

ConRoeXFIRE-eSATA2. is not a serial ATA support Mother board  
Please remove Support CD or choice another boot device to Boot  
Thanks

Reboot system now

Press any key to continue . . .

Control-Break pressed.

Terminate batch file 'C:\FREEDOS\FDAUTO.BAT' (Yes/No/All)

C:\>satafd

3.插入软盘。开始生成 SATA 软盘。

或者请从华擎网站下载驱动程序并将它复制到软盘。

<http://www.asrock.com/support/download.asp?Model=ConRoeXFIRE-eSATA2>