


**1. Q: Where could I get the maximum share memory on H55 series motherboards?**

**A:** The shared memory size is dynamically controlled by VGA driver, and the maximum share memory size will be available only when more than 4GB memory is installed under 64-bit OS.

Please kindly refer to the following steps to check the maximum graphic share memory.

1. Visit the "Display" option in the control and choose "Advanced setting".
2. Choose "Intel Graphic and Media Control Panel".
3. Click the "Graphic Properties."
4. Visit the "Option and support" and choose "Information Center".
5. Then you could see the information at the right side.

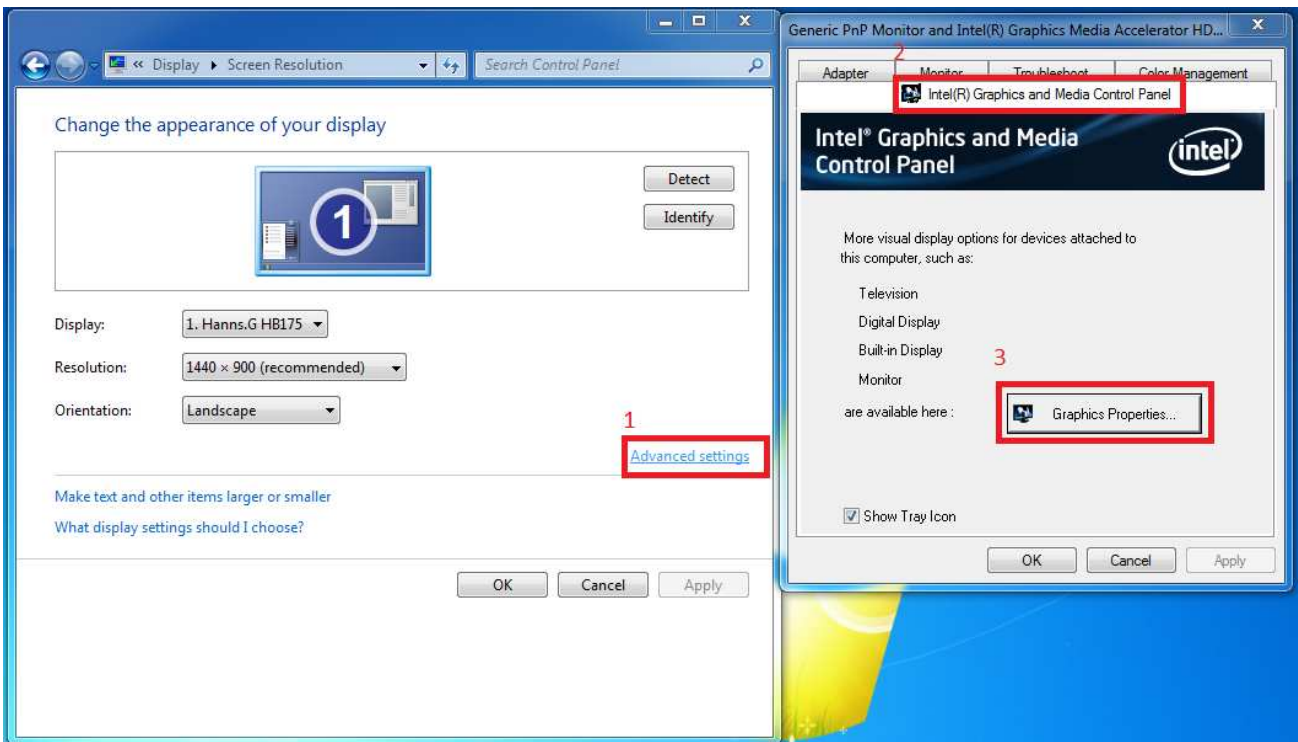

**2. Q: How to play AVATAR Blue-Ray Disk with Power DVD Ultra on ION330 series system ?**

**A:** Please kindly visit CyberLink web site to download the latest patch and upgrade it.

[http://www.cyberlink.com/downloads/support/index\\_en\\_US.html](http://www.cyberlink.com/downloads/support/index_en_US.html)

For Power DVD10, please kindly download the 1705 version.

---

**2010-05-14**

**PowerDVD 10 Ultra Updates:** This update file updates PowerDVD 10 Ultra to PowerDVD 10 Ultra build 1705. For PowerDVD retail and online purchase versions only. To check the updates for hardware bundled versions, click [here](#) for instructions.



For Power DVD9, please kindly download the 2528 version.

---

**2010-02-08**

**PowerDVD 9 Ultra Updates:** This update file updates PowerDVD 9 Ultra to PowerDVD 9 Ultra build 2528. For PowerDVD retail and online purchase versions only. To check the updates for hardware bundled versions, click [here](#) for instructions.

