

Z690 Taichi Razer Edition LED Firmware Update SOP


Please flash the RGB controller firmware by following the steps below.

Step 1.

Download the firmware file from ASRock website and extract the compressed file.


Step 2.

Execute "UpdateFW.cmd" to update the RGB controller firmware.

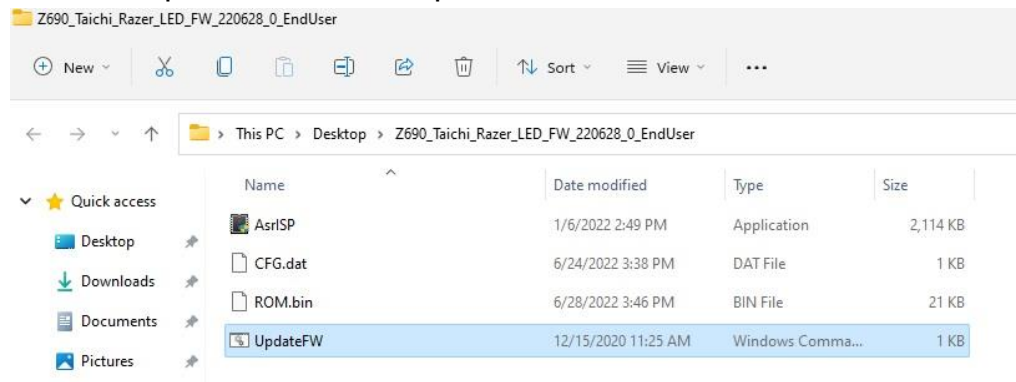

Step 3.

 After step 2 please wait for 30 seconds or so and the firmware flash will finish.

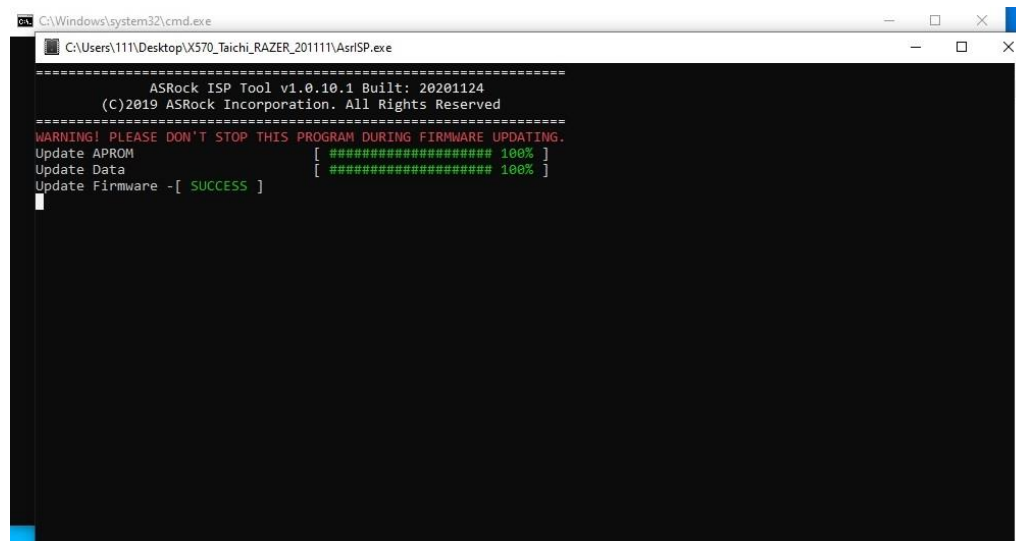

Step 4.


After the message "update firmware SUCCESS" is shown, please shut down your system and turn off the power supply for 1 minutes.

Step 5.

Please turn on your power supply to boot your system.

Step 6.

After the system enter the Windows environment, please go to Windows notification area to check the Razer application icons is shown.

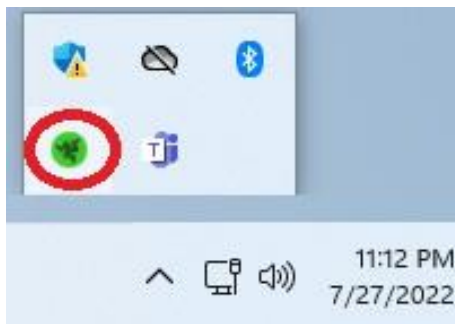

Step 7.

You can open the Razer Synapse 3 to configure your Razer devices.