



SD card reader FW update SOP


1. Don't connect SD card, USB cable and 4-pin power cable to Wi-SD box.

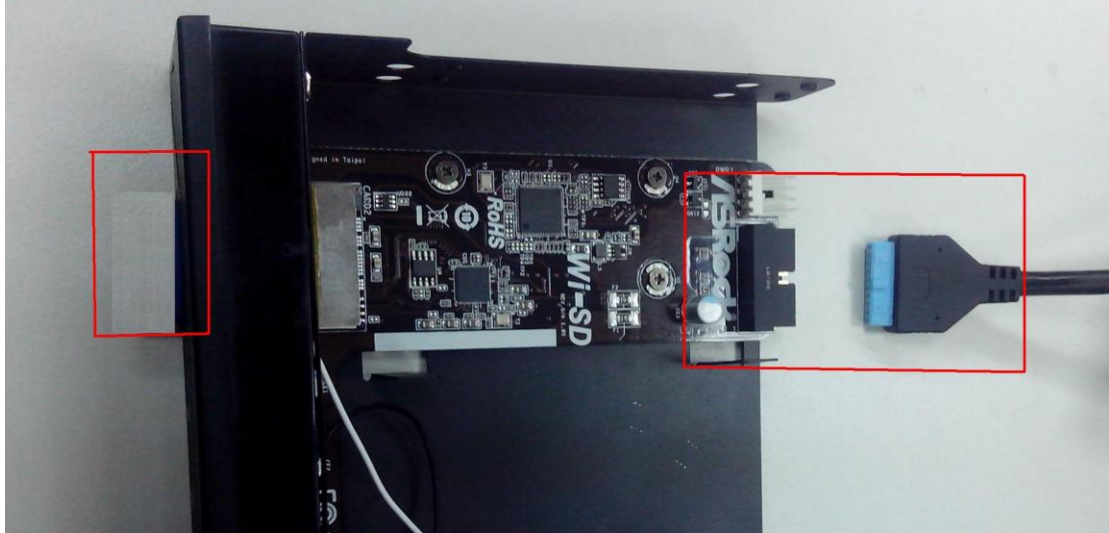


2. Boot system and enter OS.
3. Run attachment program
"RTS5307E_DL_5V-Mode_SDMS_nDelink_RW_LTM_V08_20130718.exe"

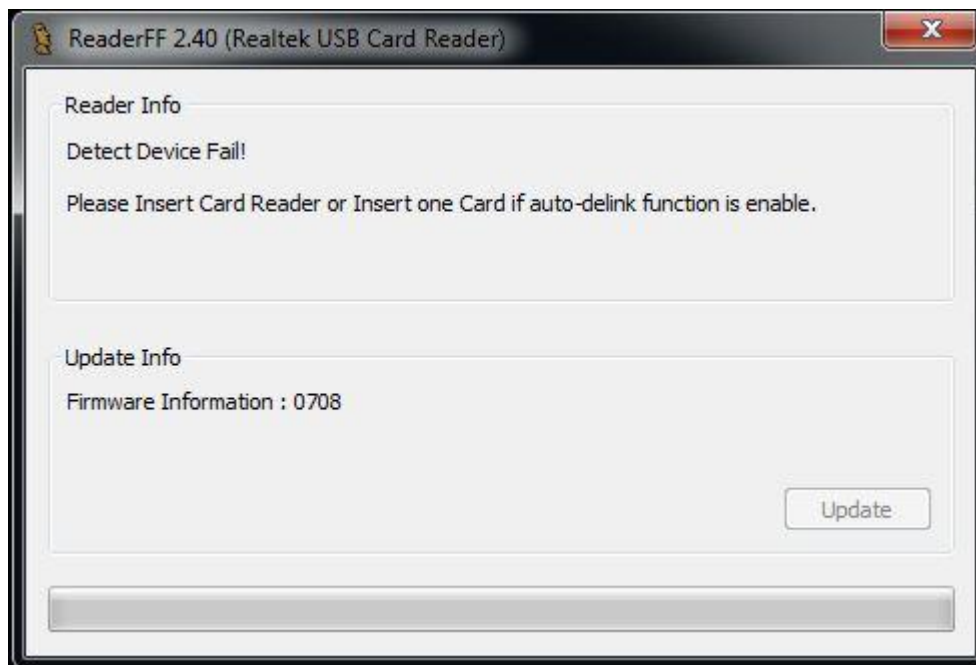

4. Connect USB3.0 cable to Wi-SD box and insert a SD card.

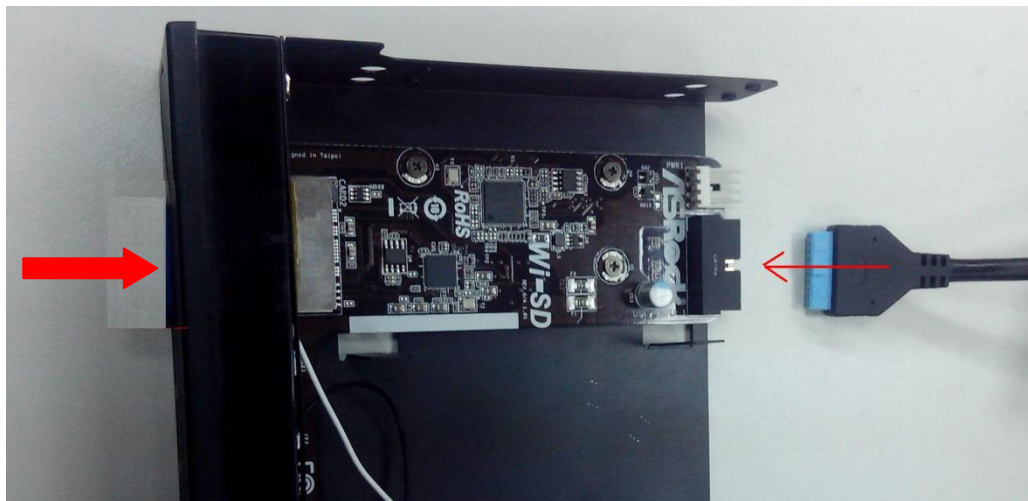

5. Click “Update”

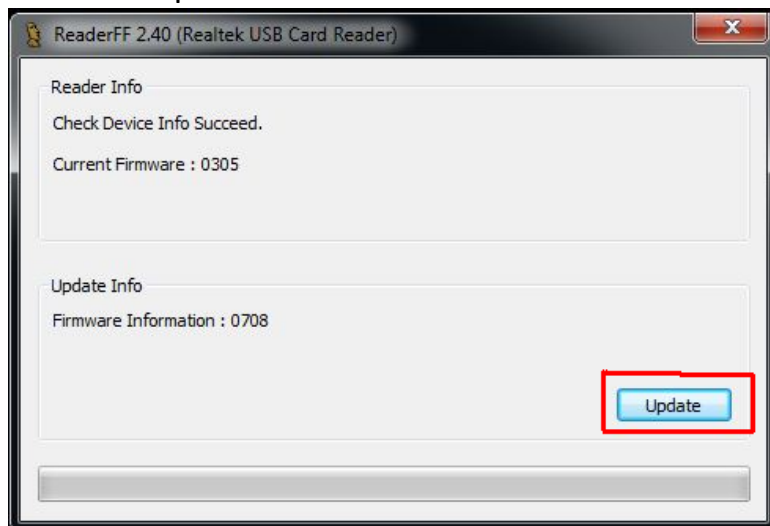

6. Update OK!

