
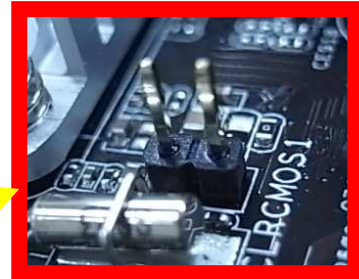



## AD425PV3 and AD525PV3 BIOS update SOP

### Step.1 Clear CMOS

Please unplug the 24-pin power connector and use jumper cap or metal material (such as screw driver) to short 2 pins on CLRCMOS1 for 5 to 10 sec.

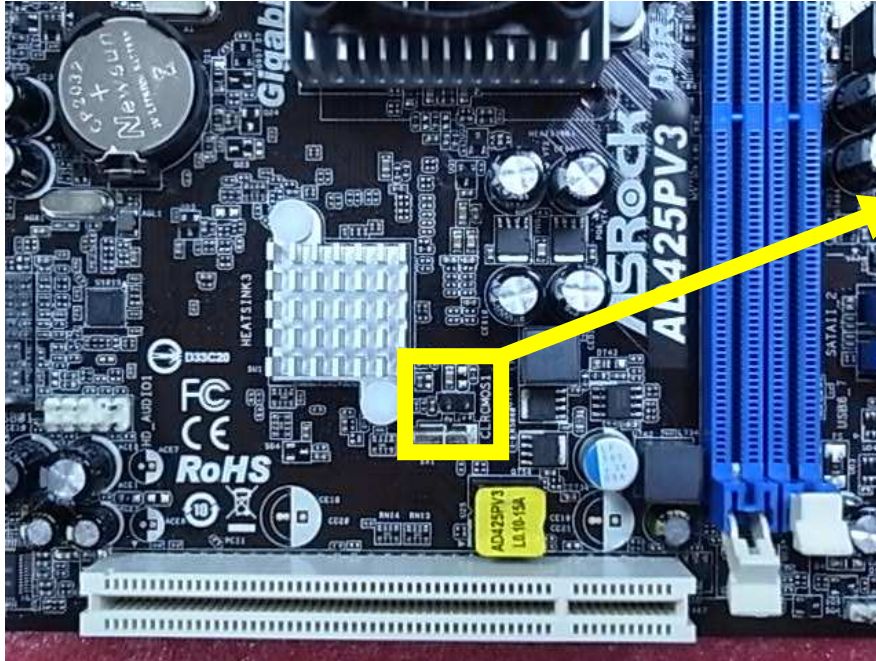

If your M/B has been installed on chassis, please use metal material (such as screw driver) to short 2 pins on CLRCMOS1 for 5 to 10 sec.

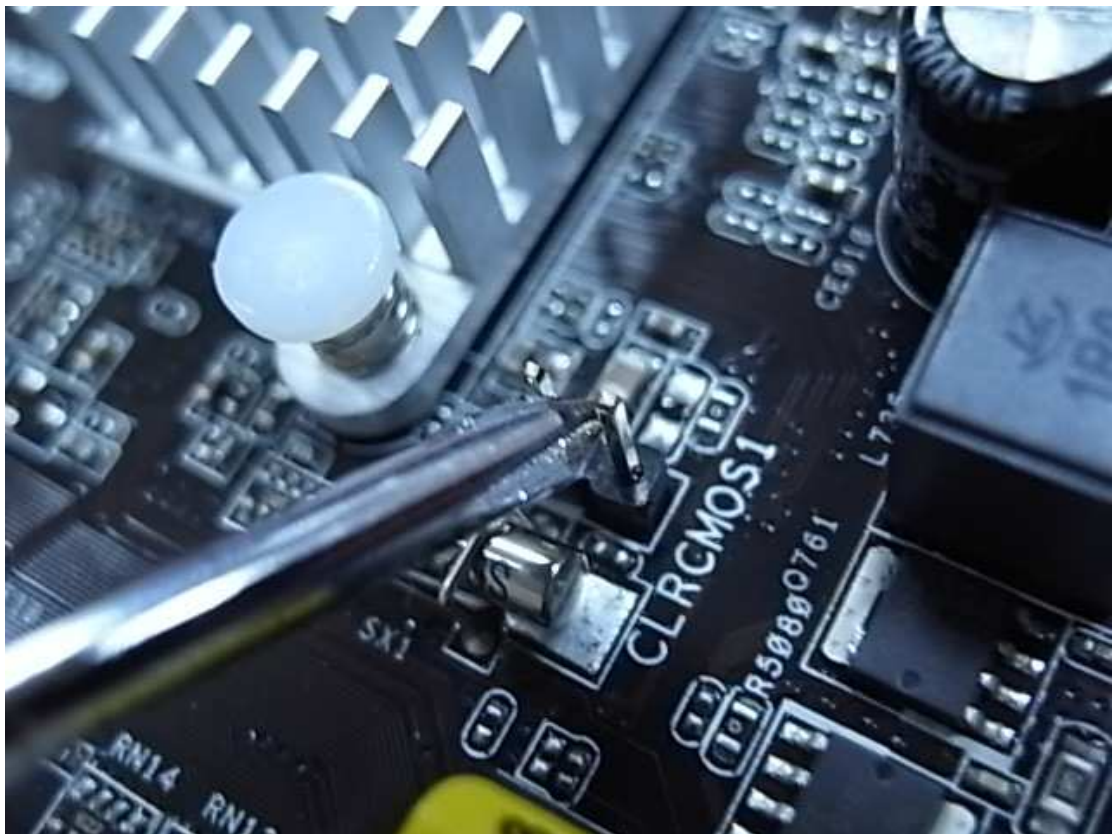


Step2. Put the BIOS ROM file into USB flash drive and connect it with USB port.


Step3. Install 24-pin power code back to M/B and power on system.

Step4. Press [Delete] or [F2] to enter BIOS screen.


Step5. Please select ASRock Instant Flash under Advanced settings page.

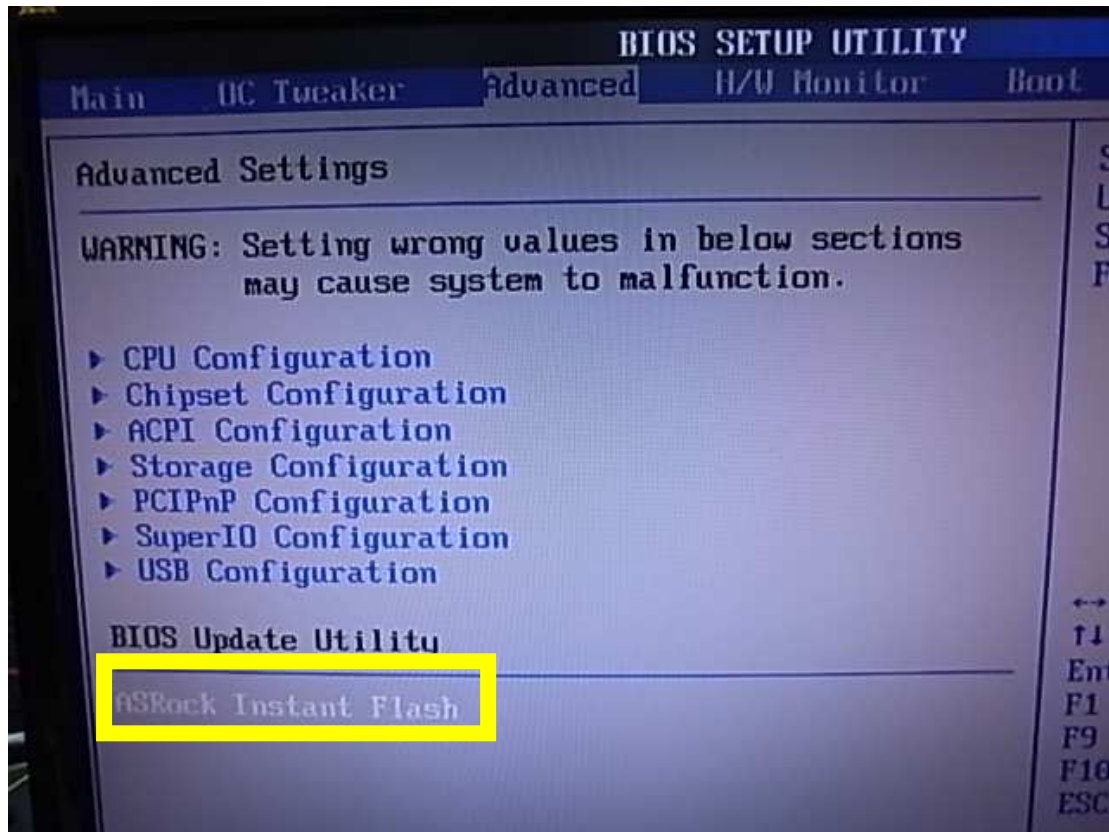

Step6. Select the BIOS and press [Enter]

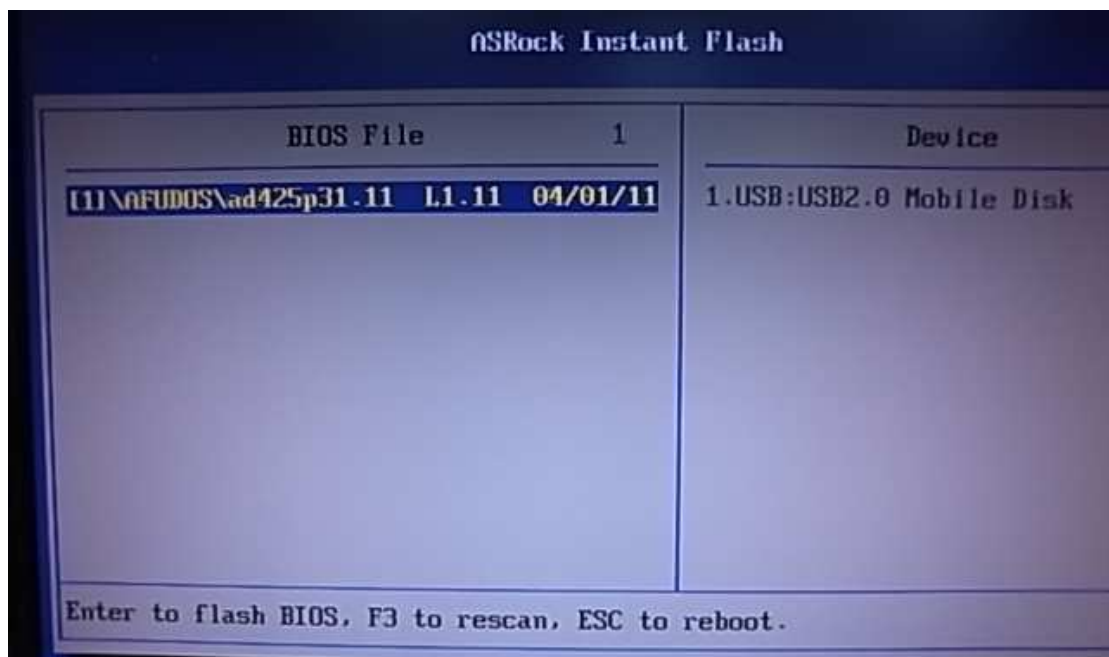

After BIOS flash complete, you will see the screen as below, press any key to reboot system.

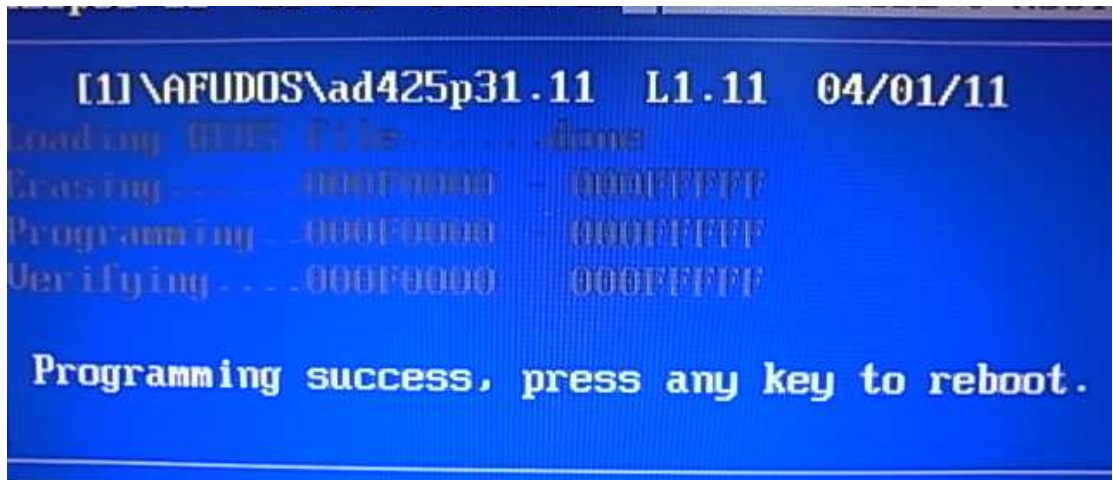

Step7. Press [Delete] or [F2] to enter BIOS, adjust the date, month and year.