



1. Q: How do I connect the CIR receiver which bundle with H67M-GE/HT?

A: Step1. Please connect the USB front panel cable to CIR1 and USB 6_7 header.

The pin header mark in red is required to connect.

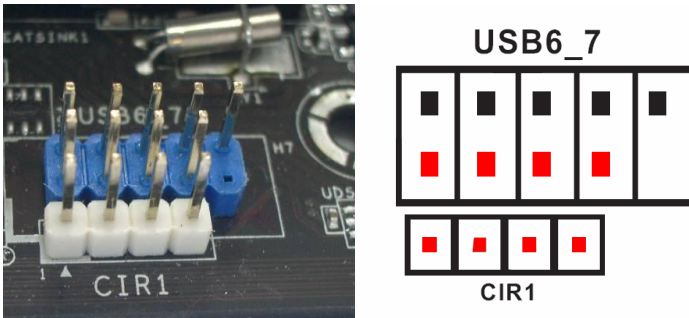


The properly connecting USB front panel cable with CIR header as below picture.

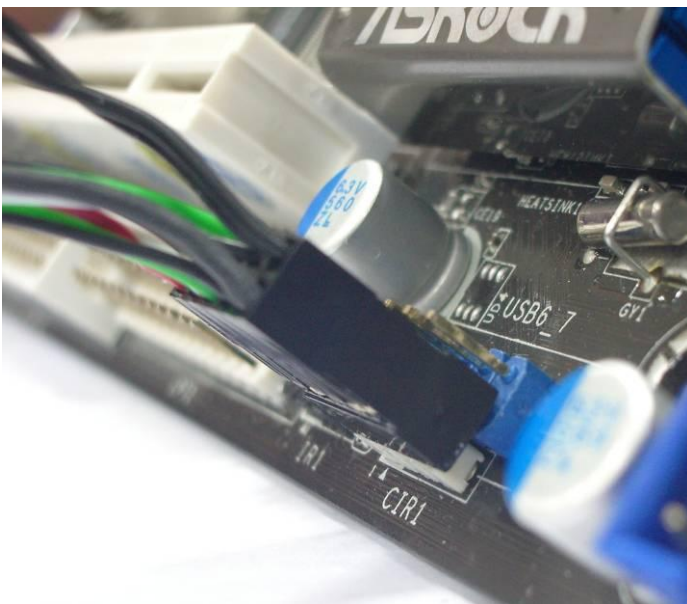

Step2: Please connect CIR receiver to USB front panel before booting up system.

Step3: Enter BIOS setting screen and make sure the CIR controller is setting at [Enabled] (Advanced -> Super IO Configuration -> CIR Controller -> [Enabled])

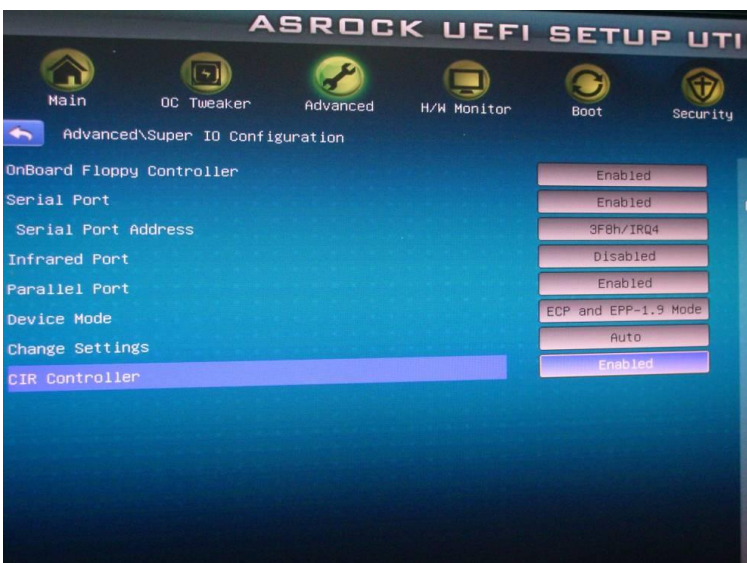

(If you didn't see the CIR Controller option in BIOS, please shut down your system and plug CIR receiver to another USB port on front panel then try again)

Step4: Enter Windows, Execute ASRock support CD and install CIR Driver (it would be listed at the bottom of driver list)



Note: Please connect the CIR receiver to USB front panel before you boot up system.

2. Q: I connect Vision 3D with TV via HDMI cable, but cannot hear any audio playback after system resume from suspends. What do I do?


A: Please download and install new VGA driver 266.35 from following link.

Link: <http://www.asrock.com/nettop/overview.asp?Model=Vision 3D Series>


3. Q: After installing an optional Windows update "Accusys Inc - Storage- ACS-6xxxx" on X58 Extreme6, P67 Professional, P67 Extreme6 or P67 Extreme4, some onboard devices cannot work normally. How do I solve this problem?

A: Please kindly follow the steps as below to remove "Accusys Inc- Storage- ACS-6xxxx".


Step1. Click "Start" -> "Computer" -> "Manage".

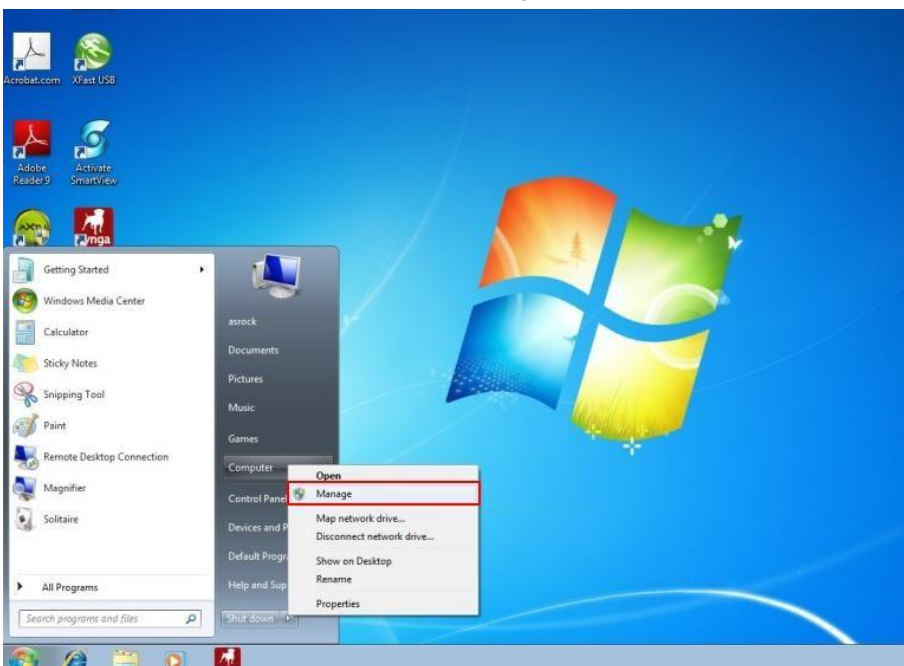


Step2. Click "Device Manager" -> "ACS-6xxxx" -> "Properties".

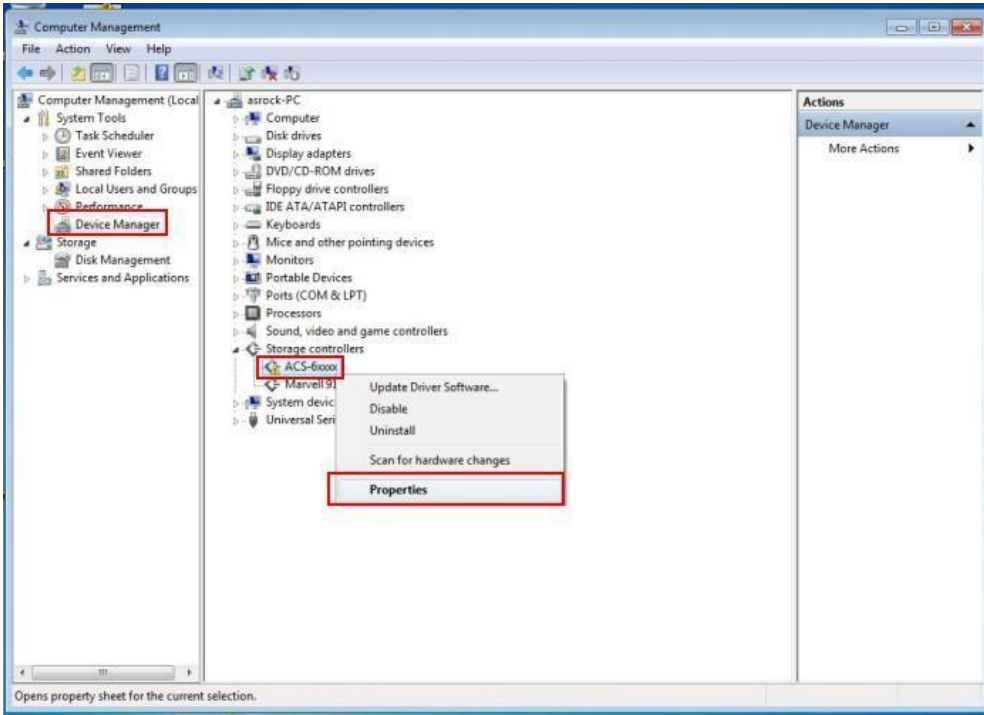

Step3. Click "Uninstall".

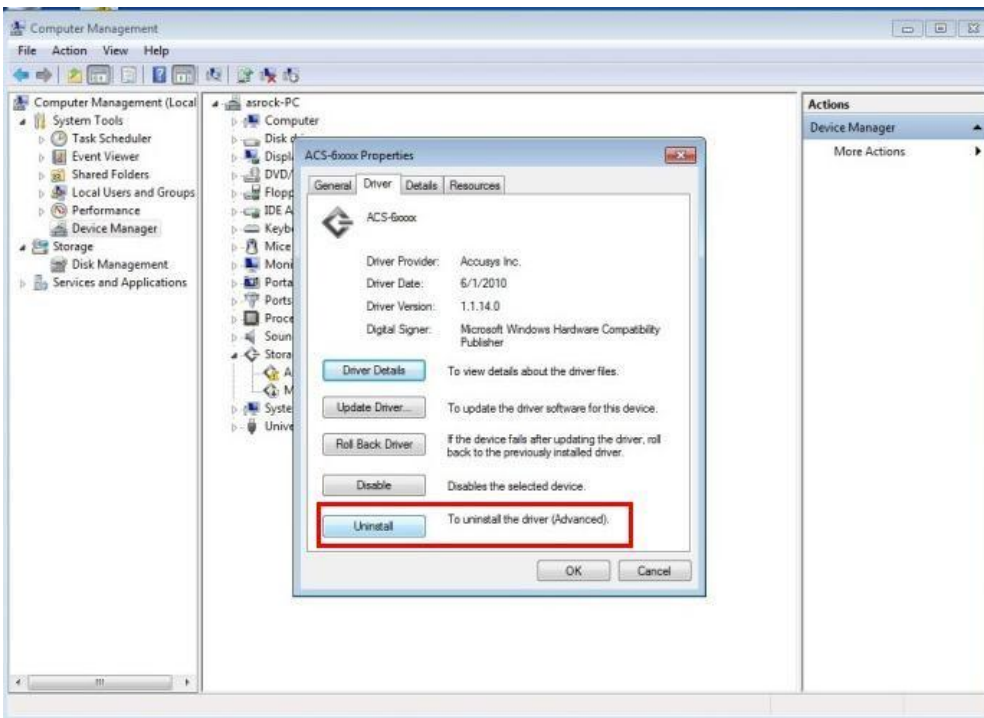

Step4. Enable "Delete the driver software for this device" option and then press "OK".

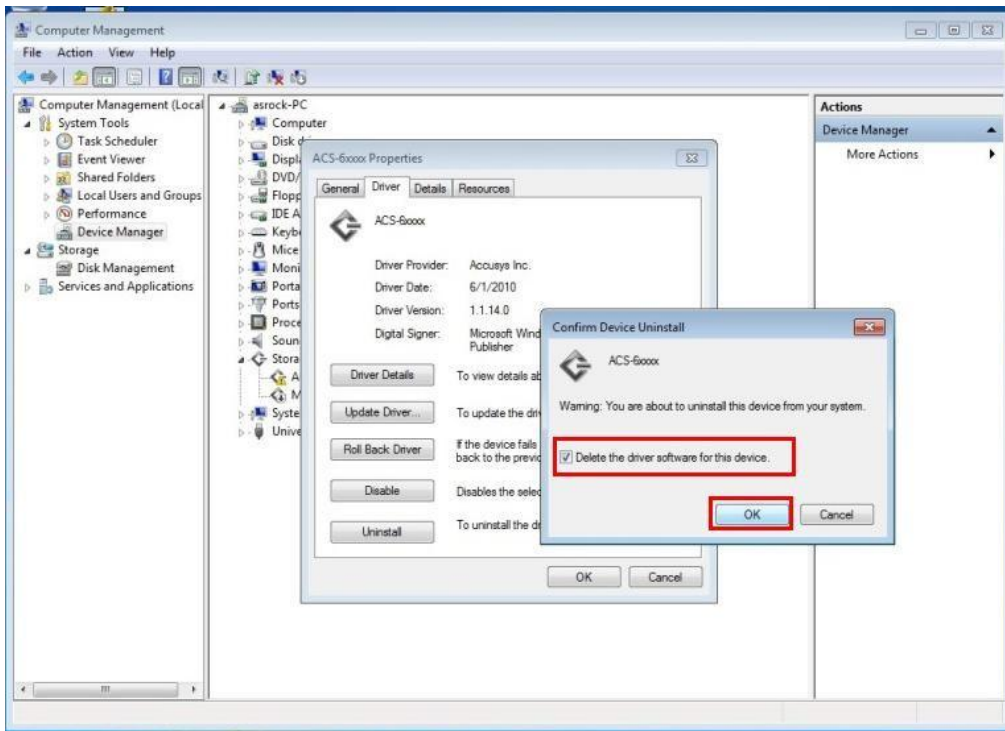

After uninstalling the driver of ACS-6xxxx and rebooting the system, the LAN controller will work normally.